

Instructions

# Pressure transmitters

MBS 4201, MBS 4251, MBS 4701 and MBS 4751

060R9345

060R9345

**Content**  
**Page**


- 1 Description/application
- 2 Identification
- 3 Specifications
- 4 Safety instructions
- 5 Installation/dimensions
- 6 Electrical connection
- 6 Maintenance/adjustment

**Description/Application**


**Application:** Pressure measurement in potentially explosive areas.

**Approval:** Ex ia IIC T6...T4 (MBS 42xx series) and Ex ia IIC T4 (MBS 47xx series) in accordance with ATEX directive 2014/34/EU.


**Function:** Pressure transmitters type MBS 4201, MBS 4251, MBS 4701 and MBS 4751 convert the pressure measured to a 4 – 20 mA current signal.

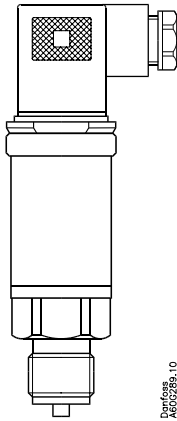


Danfoss  
A605289.10

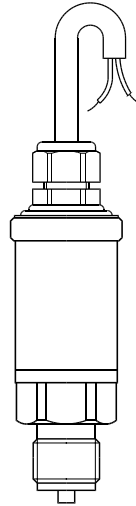


Danfoss  
A605289.10

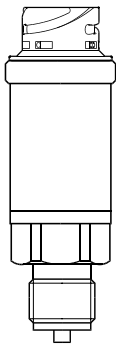 

Danfoss  
A605290.10

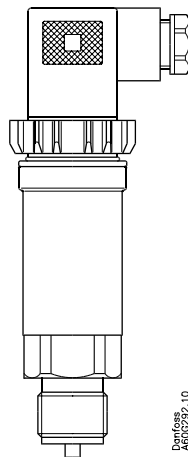

Danfoss  
A605292.10

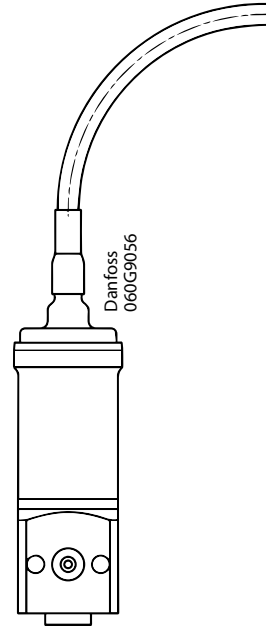

Danfoss  
060G9056

**Identification**

**3116**  
**Danfoss**  
 MADE IN DENMARK

**PRESSURE TRANSMITTER**  
**MBS 4701-2011- A1AB08-0**  
**060G4307**

Code number

111 = WWY  
 Production - week/year (WW/Y)

02803111  
 Made in China  
 02803 = Serial no.

Range  $P_e$  : 0...10 bar  
 0...1MPa

PB/MWP : 2 MPa/20 bar / 800 kPa

SUPPLY : 10...28 V DC

OUTPUT : 4...20 mA

+SUPPLY : PIN 1

-COMMON : PIN 2

CE 0539 Ex II 1G

DEMKO 01 ATEX 127938X  
 EEx ia IIC T4 GA  
 IECEx ULD 12.00005X

Ui : 28V

li : 100 mA

Pi : 0,7 W

Li : 8  $\mu$ H

Ci : 50 nF

For : Ambient temperature  
 See: user instruction

Supply voltage

Output signal

Electrical connection

Type no. (Indicates transmitter specification - see key below)

Type no.  
 MBS 4201-  
 MBS 4251-  
 MBS 4701-  
 MBS 4751-

**Gasket**

|   |                                      |
|---|--------------------------------------|
| 0 | ..... 0 N0 Gasket                    |
| 1 | ..... 1 Gasket Viton -20 °C – 125 °C |
| 2 | ..... 2 Gasket NBR -40 °C – 85 °C    |
| 3 | ..... 3 O-Ring Viton -20 °C – 125 °C |
| 4 | ..... 4 O-Ring NBR -40 °C – 125 °C   |

**Pressure connection**

|        |   |
|--------|---|
| GB 0 4 | ..... DIN 3852-E-G1/4, Gasket: DIN 3869-14-NBR            |
| AB 0 8 | ..... G1/2A (EN 837)                                      |
| AC 0 4 | ..... 1/4-18 NPT  |
| AC 0 8 | ..... 1/2-14 NPT  |
| FA 0 8 | ..... ISO 6149-2, M14x1.5 -6g, O-ring 11.3x2.2, NBR       |
| DF 0 2 | ..... M10 x 1 female with flange connection <sup>1)</sup> |

<sup>1)</sup> Only MBS 4201 and MBS 4251

**Electrical connection**

|    |   |
|----|---|
| A0 | ..... No Plug EN 175301-803-A                                     |
| A1 | ..... Plug PG9 EN 175301-803-A                                    |
| A6 | ..... Plug PG11 EN 175301-803-A                                   |
| G9 | ..... Plug Bayonet A1-3.2- ISO 15170-Sn <sup>1)</sup>             |
| DB | ..... Cable Screened 2m Blue PVC <sup>1)</sup>                    |
| DC | ..... Cable Screened 5m Blue PVC <sup>1)</sup>                    |
| J1 | ..... Cable Screened 7m Blue PVC <sup>1)</sup>                    |
| DF | ..... Cable Screened 12m Black ETFE Marine approved <sup>1)</sup> |
| DH | ..... Cable Screened 6m Black ETFE Marine approved <sup>1)</sup>  |

<sup>1)</sup> Only MBS 4201 and MBS 4251

**Measuring range**

|             |          |
|-------------|----------|
| 0 – 1 bar   | ..... 10 |
| 0 – 1.6 bar | ..... 12 |
| 0 – 2.5 bar | ..... 14 |
| 0 – 4 bar   | ..... 16 |
| 0 – 6 bar   | ..... 18 |
| 0 – 10 bar  | ..... 20 |
| 0 – 16 bar  | ..... 22 |
| 0 – 25 bar  | ..... 24 |
| 0 – 40 bar  | ..... 26 |
| 0 – 60 bar  | ..... 28 |
| 0 – 100 bar | ..... 30 |
| 0 – 160 bar | ..... 32 |
| 0 – 250 bar | ..... 34 |
| 0 – 400 bar | ..... 36 |
| 0 – 600 bar | ..... 38 |

**Output signal**

|   |                 |
|---|-----------------|
| 1 | ..... 4 – 20 mA |
|---|-----------------|

**Pressure reference**

|   |                |
|---|----------------|
| 1 | ..... Gauge    |
| 2 | ..... Absolute |

## Specifications

|                |           |
|----------------|-----------|
| Output current | 4 – 20 mA |
| Supply voltage | 10 – 28 V |

## Safety specifications

### Electrical

|                     |                |        |
|---------------------|----------------|--------|
| Max. supply voltage | U <sub>i</sub> | 28 V   |
| Max. Input current  | I <sub>i</sub> | 100 mA |
| Max. Input power    | P <sub>i</sub> | 0.7 W  |
| Internal capacity   | C <sub>i</sub> | 50 nF  |
| Internal inductance | L <sub>i</sub> | 8 μH   |

### Adjustable Type, MBS47x1-xxxx-Yxxxx (Y=A0, A1, A6, G9 are indicative for plug type)

|                     |    |              |
|---------------------|----|--------------|
| Ambient temperature | T4 | -40 – 100 °C |
| Media temperature   | T4 | -40 – 125 °C |

### Plug Type, non-adjustable, MBS42x1-xxxx-Yxxxx (Y=A0, A1, A6, G9 are indicative for plug type)

|                     |    |              |
|---------------------|----|--------------|
| Ambient temperature | T4 | -40 – 100 °C |
|                     | T5 | -40 – 75 °C  |
|                     | T6 | -40 – 50 °C  |
| Media temperature   | T4 | -40 – 125 °C |
|                     | T5 | -40 – 95 °C  |
|                     | T6 | -40 – 50 °C  |

### Fixed Cable Types, non-adjustable, MBS 42x1-xxxx-Yxxxx (Y = DB, DC, J1, DF, DH are indicative cable lengths, max. 12 m)

|  |    | DB, DC, J1 PVC cable | DH, DF ETFE cable |
|--|----|----------------------|-------------------|
| Ambient temperature (fixed installations)                            | T4 | -40 – 80 °C          | -40 – 95 °C       |
|  | T5 | -40 – 75 °C          | -40 – 75 °C       |
|  | T6 | -40 – 50 °C          | -40 – 50 °C       |
| Ambient temperature (cables flexed during installation or operation) | T4 | -5 – 70 °C           | -5 – 70 °C        |
|  | T5 | -5 – 70 °C           | -5 – 70 °C        |
|  | T6 | -5 – 50 °C           | -5 – 50 °C        |
| Media temperature  | T4 | -40 – 125 °C         | -40 – 125 °C      |
|  | T5 | -40 – 95 °C          | -40 – 95 °C       |
|  | T6 | -40 – 50 °C          | -40 – 50 °C       |

## Pressure specification

|                   |     |       |         |         |       |       |        |        |        |        |        |         |         |         |         |         |
|-------------------|-----|-------|---------|---------|-------|-------|--------|--------|--------|--------|--------|---------|---------|---------|---------|---------|
| Measuring range   | bar | 0 – 1 | 0 – 1.6 | 0 – 2.5 | 0 – 4 | 0 – 6 | 0 – 10 | 0 – 16 | 0 – 25 | 0 – 40 | 0 – 60 | 0 – 100 | 0 – 160 | 0 – 250 | 0 – 400 | 0 – 600 |
| Overload (Static) | bar | 6     | 12      | 24      | 24    | 60    | 60     | 150    | 150    | 300    | 360    | 600     | 1200    | 1500    | 1500    | 1500    |
| Burst pressure    | bar | 100   | 100     | 100     | 100   | 100   | 100    | 150    | 150    | 400    | 800    | 1200    | 1200    | 2000    | 2000    | 2000    |



## Safety Instructions

|                                     | EN 175301-803-A               | Bayonet A1-3.2- ISO 15170-Sn |                   |
|-------------------------------------|-------------------------------|------------------------------|-------------------|
|                                     |                               |                              |                   |
| Materials of electrical connections | Glass filled polyamid, PA 6.6 | Glass filled polyester, PBT  | PVC cable or ETFE |
| Protection                          | IP65                          | IP67 / IP69K                 | IP67              |

### Safety instructions

All national safety regulations must be complied with in connection with installation, start-up and operation of Danfoss pressure transmitters type MBS 4201, MBS 4251, MBS 4701 and MBS 4751. Furthermore, the requirements of the Declaration of Conformity and national regulations for installation in explosion areas apply. Disregarding such regulations involves a risk of serious personal injury or extensive material damage.

Work in connection with the pressure transmitters mentioned must be performed only by suitably qualified persons.

#### Basic safety and health requirements are fulfilled through compliance with:

EN60079-0:2012+A11:2013: 2012, IEC60079-0: 6th edition, EN60079-11: 2012, IEC60079-11: 6th edition, EN60079-26: 2015, IEC60079-26: 3rd edition.

**Special Ex protection instructions:** In the event of damage to enclosure or diaphragm, the pressure transmitter must be replaced. The end user must ensure the installation is made in accordance to IEC/EN60079-25 and IEC/EN60079-14.

**WARNING** –Potential Electrostatic Charging Hazard. The transmitter must only be installed in surroundings with low wind speed, and where rubbing on the plug is unlikely. Cleaning with a damp cloth is recommended. To avoid build-up of electrostatic discharge it must be ensured the pressure connection of the pressure transmitter is having a reliable connection to earth with an impedance no exceeding 1 Gohm.

The MBS transmitters do not provide isolation meeting the dielectric strength requirements of IEC/EN60079-11.

MBS transmitters contain 10 nF capacitance from any input terminal to earth.

#### Special conditions for safe use in accordance to the ATEX/IECEx certificate:

For installations in which both the Ci and Li of the connected apparatus exceeds 1% of Co and Lo parameters (excluding the cable), then 50% of Co and Lo parameters are applicable and shall not be exceeded.

Special precautions are necessary to reduce the risk due to electro-static discharge. The transmitter must only be installed in surroundings with low wind speed, and where rubbing the plug is unlikely. Cleaning with a damp cloth is recommended.

The installation shall ensure that the resistance to earth of metallic parts of the equipment enclosure is less than 1 GOhm.

The equipment does not provide 500 V isolation to earth as required by IEC/EN60079-11: clause 6.3.13.

Installations of the pressure connection across boundary walls requiring Category 1G equipment and a less hazardous area must be gas tight as required by IEC/EN60079-26. Gaskets and seals used at the pressure connection must be suitable for use with the process medium.

#### Special instruction when adjusting MBS 47xx series:

If possible only adjust the MBS in non-hazardous area or take precaution to avoid electrostatic discharge and ensure the earthen of the transmitter housing is maintained. The transmitter must always be supplied from an intrinsic safety barrier.



#### Demands on the medium:

Parts in contact with the medium are made of stainless steel, EN 1088-1 1.4404 (AISI 316L). The user is responsible for a careful analysis of all process parameters when materials have to be specified and for ensuring the process medium is neutral to stainless steel as some media can be corrosive. The end user must ensure that the process connection is gas tight (as required by IEC/EN60079-26) which may require the use of a suitable gasket/seal in combination with the process connection to obtain a gas-tight connection. Gaskets and seals used at the pressure connection, including those supplied with the transmitters, must be determined as being suitable for use with the process medium and process pressure/temperature before use and alternative gasket material chosen if necessary. The end user must ensure the transmitter pressure connection is tightened with the correct torque as required for the specific thread type.

In case of problems please contact: **Danfoss A/S**  
**DK-6430 Nordborg**  
**Denmark**

You find the EC-Type Examination Certificate at: [www.ia.danfoss.com/ATEXcertificate](http://www.ia.danfoss.com/ATEXcertificate)

### Installation/dimensions

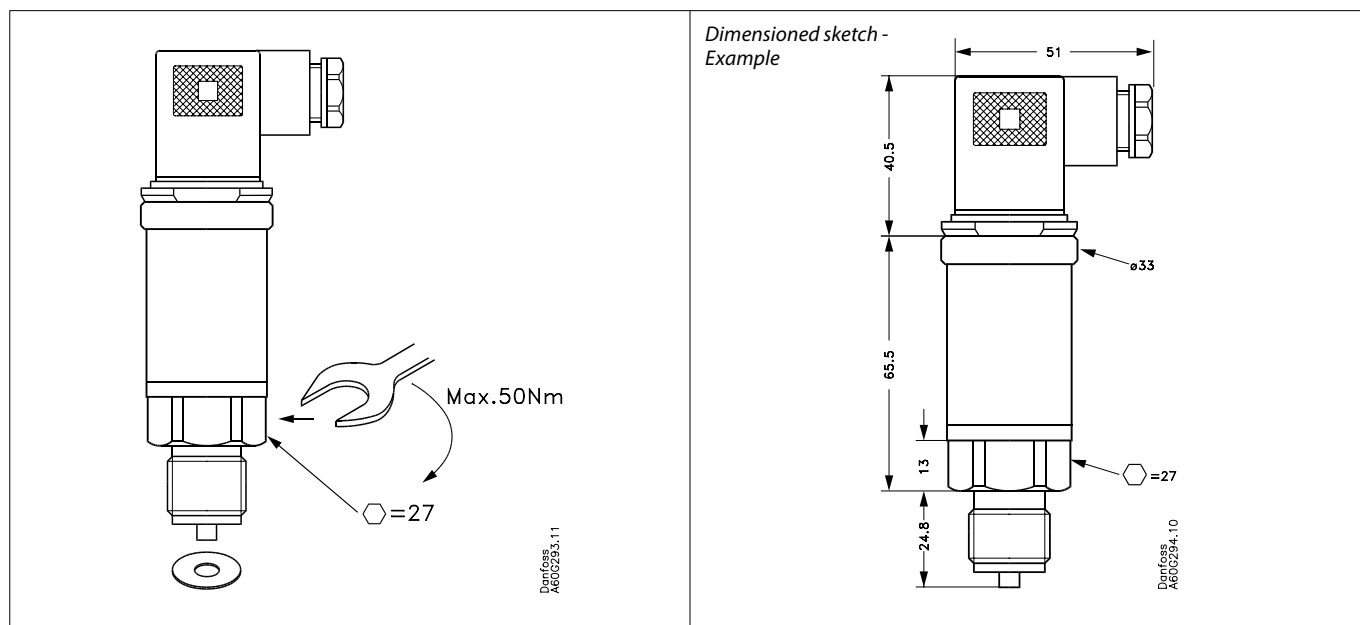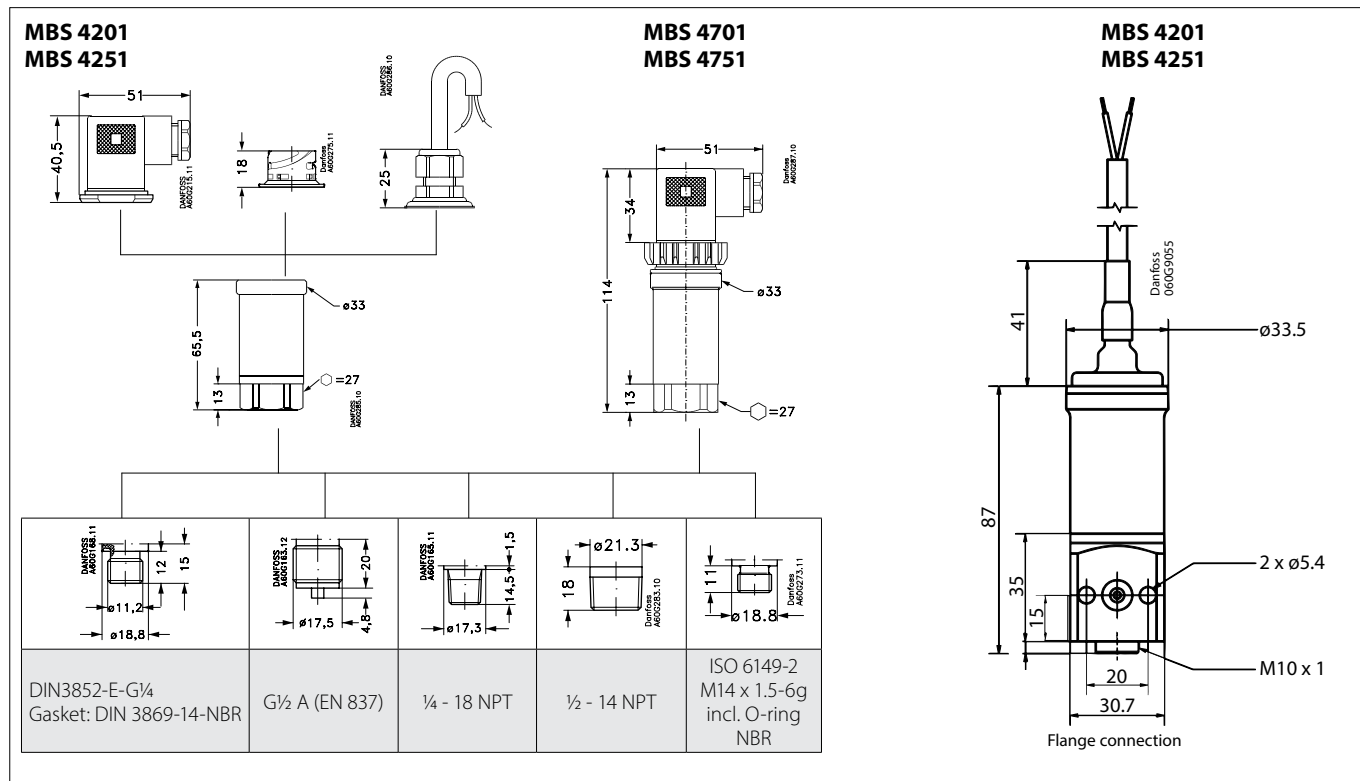

## Electrical connection

|  |  |                           |         |  |
|--|--|---------------------------|---------|--|
|  |  | <b>EN 175301-803-A</b>    |         | <p>MBS4201<br/>MBS4251<br/>MBS4701<br/>MBS4751</p> |
|  |  | +                         | -       |  |
|  |  | Pin 1                     | Pin 2   |  |
|  |  | <b>ISO 15170</b>          |         |  |
|  |  | +                         | -       |  |
|  |  | Pin 1                     | Pin 2   |  |
|  |  | <b>PVC cable (Blue)</b>   |         |  |
|  |  | +                         | -       |  |
|  |  | Black 1                   | Black 2 |  |
|  |  | <b>ETFE Cable (black)</b> |         |  |
|  |  | +                         | -       |  |
|  |  | Black                     | Blue    |  |

Cables must be specified for a minimum test voltage of 500 VAC between conductor/earth, conductor/screen and screen/earth. In addition, the total capacity and inductivity of the installation (transmitter + cable) must be taken into consideration. In Zone 0 an intrinsically safe type Ex ia circuit must be used and national regulations for Zone 0 must be complied with. The pressure transmitter must only be used in Zone 0 at atmospheric pressure between 0.8 and 1.1 bar and at ambient temperatures between -20 and 50 °C.

## Maintenance/Adjustment

|  |                        |                       |               |
|--|------------------------|-----------------------|---------------|
|  | <b>Zero adjustment</b> |                       |               |
|  | 0 – 1 to 0 – 10 bar    | -5 – 20% FS           |               |
|  |                        | 0 – 16 to 0 – 40 bar  | -5 – 10% FS   |
|  |                        | 0 – 60 to 0 – 600 bar | -2.5 – 2.5 FS |
|  |                        | Span adjustment       | -5 – 5% FS    |

Danfoss pressure transmitters type MBS 4201, MBS 4251, MBS 4701 and MBS 4751 are maintenance free.

Zero point and span (measurement area) adjustment is possible on MBS 4701 and MBS 4751.

Adjustment procedure (see drawing):

Loosen screw at top of the EN 175301-803-A plug. Remove plug.

Unscrew the black milled nut from the pressure transmitter and remove the EN 175301-803-A Plug insert from the transmitter.

Install the plug on the DIN 43650 insert and connect the current measuring instrument.

Adjust the zero point on the potentiometer below the hole marked ZERO.

Adjust the span (measuring range) on the potentiometer below the hole marked SPAN (precise pressure reference must be used).

Do not remove the silicone during adjustment. Be sure that the potentiometer is covered with silicone after adjustment