


Installation guide

Solenoid valve


Type EV215B

032R9280


032R9280

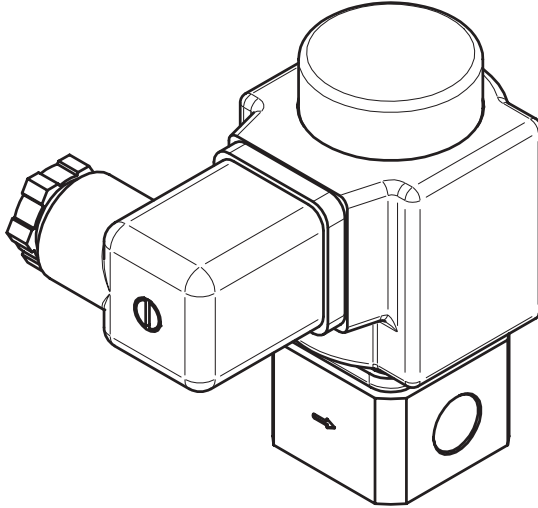


1

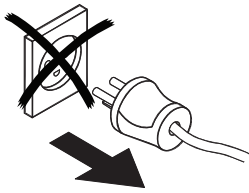


2

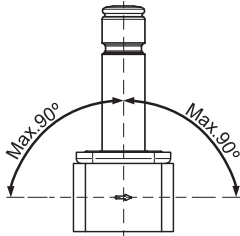


3

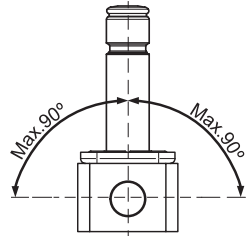

4

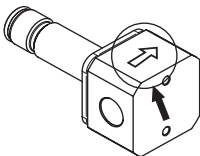

5

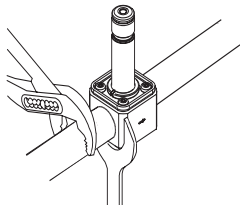

6

