
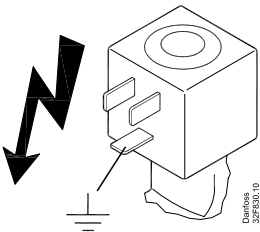


Installation Guide

Coils for EVU, EVUL, EVUB and EVUF solenoid valves



Type AS and AU

032R9517

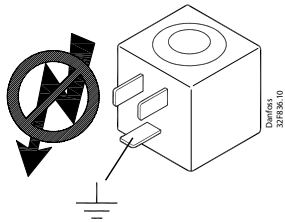

Warning

Never switch on power to the coil when it is dismantled from the valve. There is a danger the coil may be damaged and a risk of injuries and burns.

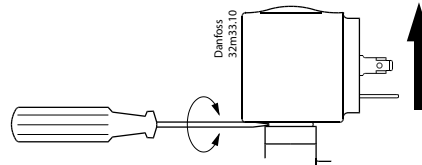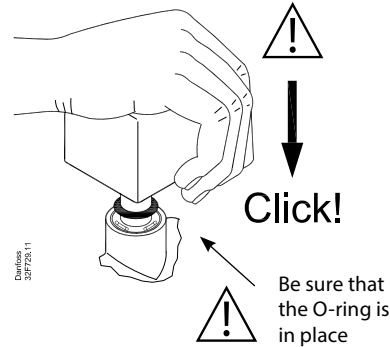


032R9517

Installation Guide


Coils for EVU, EVUL, EVUB and EVUF solenoid valves

Type AS and AU


032R9517

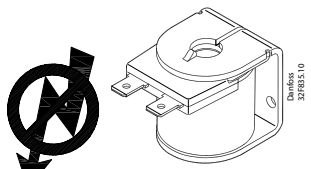


Installation Guide

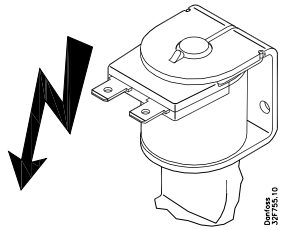

Warning
 Never switch on power to the coil when it is dismounted from the valve. There is a danger the coil may be damaged and a risk of injuries and burns.

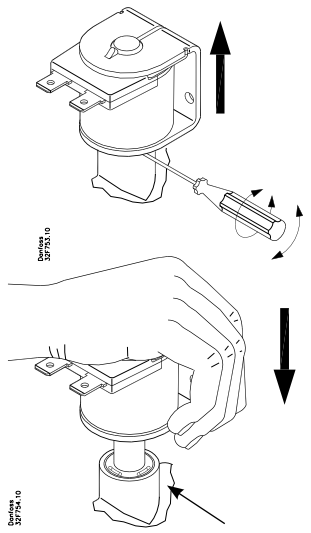

Be sure that there is **no** O-ring!

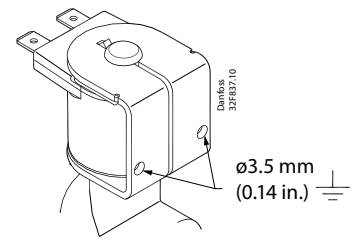

032R9517