


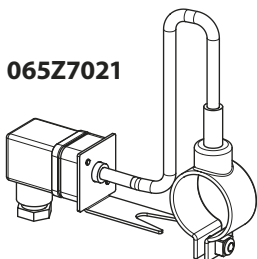

Installation Guide


Steam heater - AMV(E) 85/86, AME 685/855

065Z7021







	=
	⬡ 4 mm
	□ 17 mm
	□ 18 mm
	□ 19 mm

AMV(E) 85/86 & VFS 2 DN 65-100, VF 2/3 DN 125-150

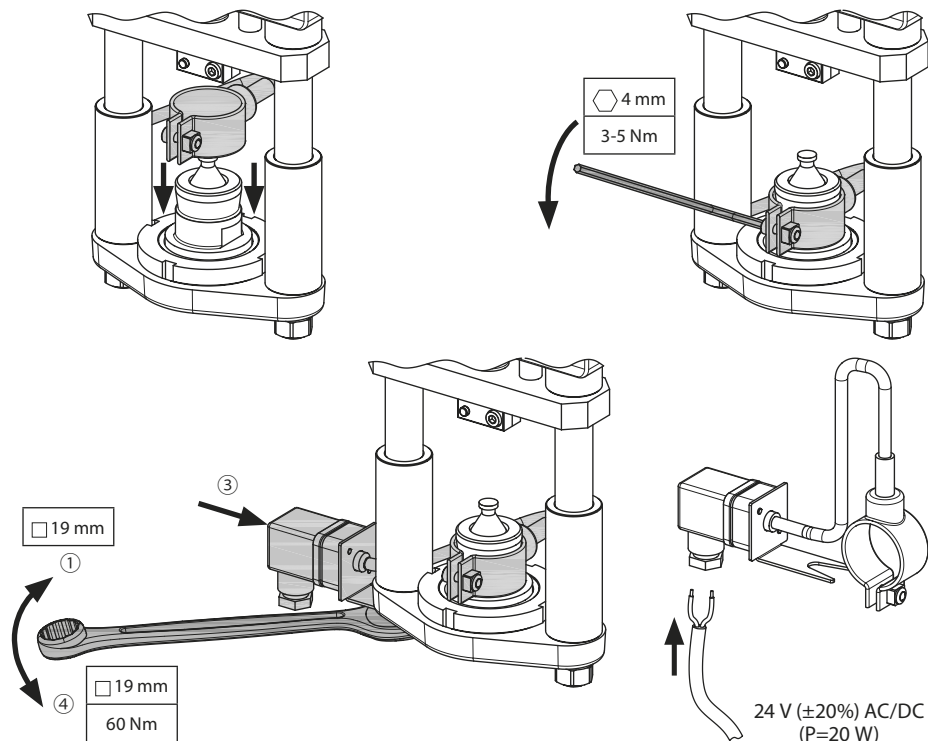




AMV(E) 85/86, AME 685/855

AME 685 & VF3 DN 200-300

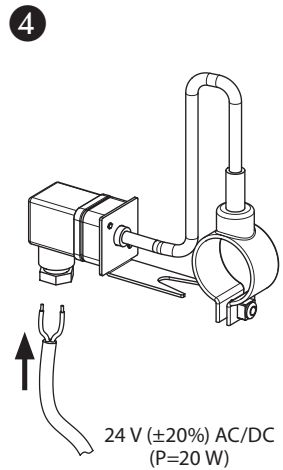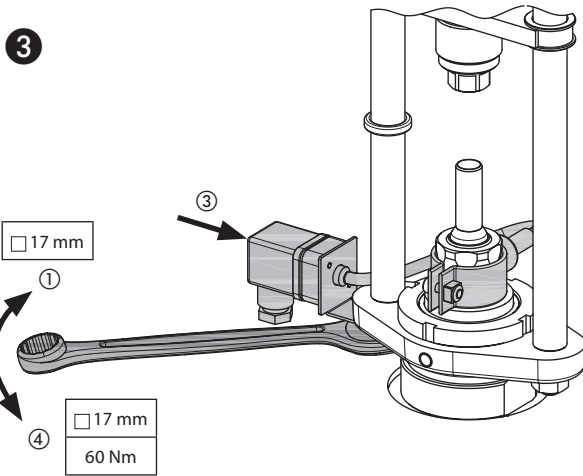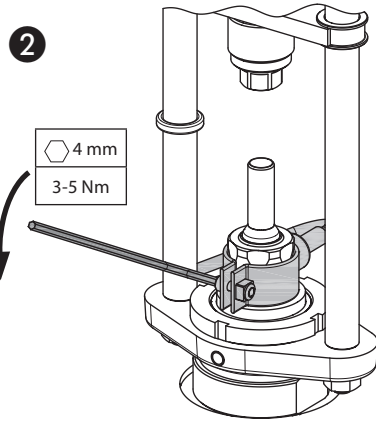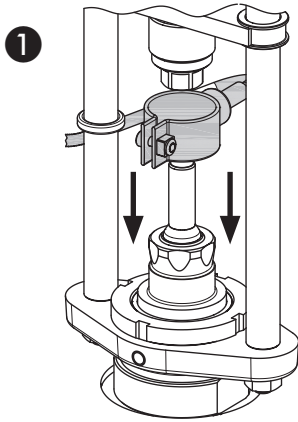

AMV(E) 85/86, AME 685/855

AME 855 & VF3 DN 200-300

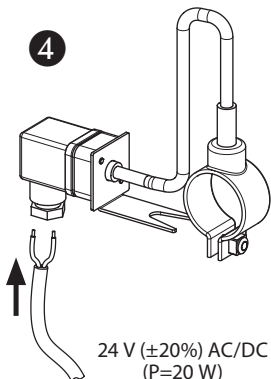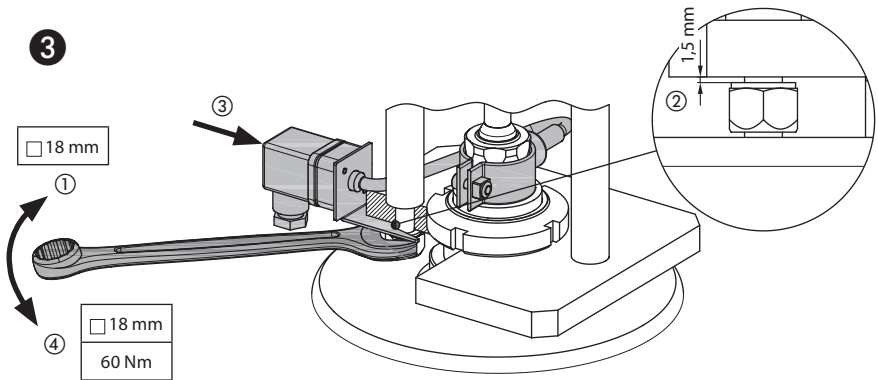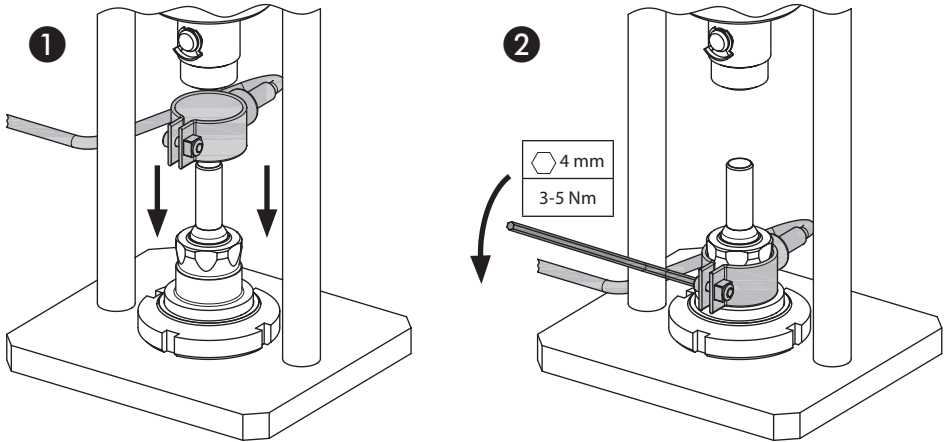



AMV(E) 85/86, AME 685/855



Danfoss A/S
Heating Segment • danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.