

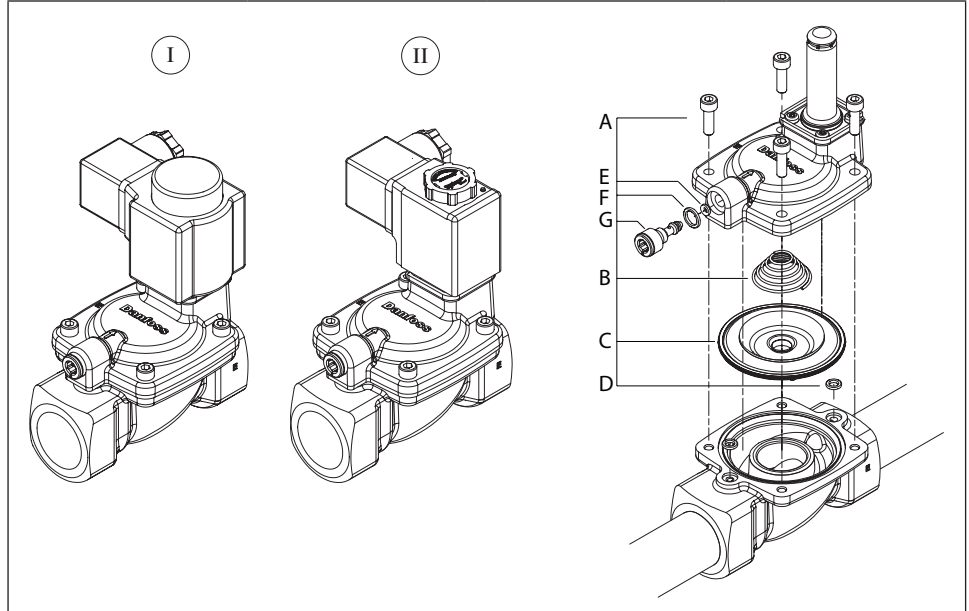
Installation guide - Spare parts and accessories

 





 
# Solenoid valve - Spare part diaphragm kit

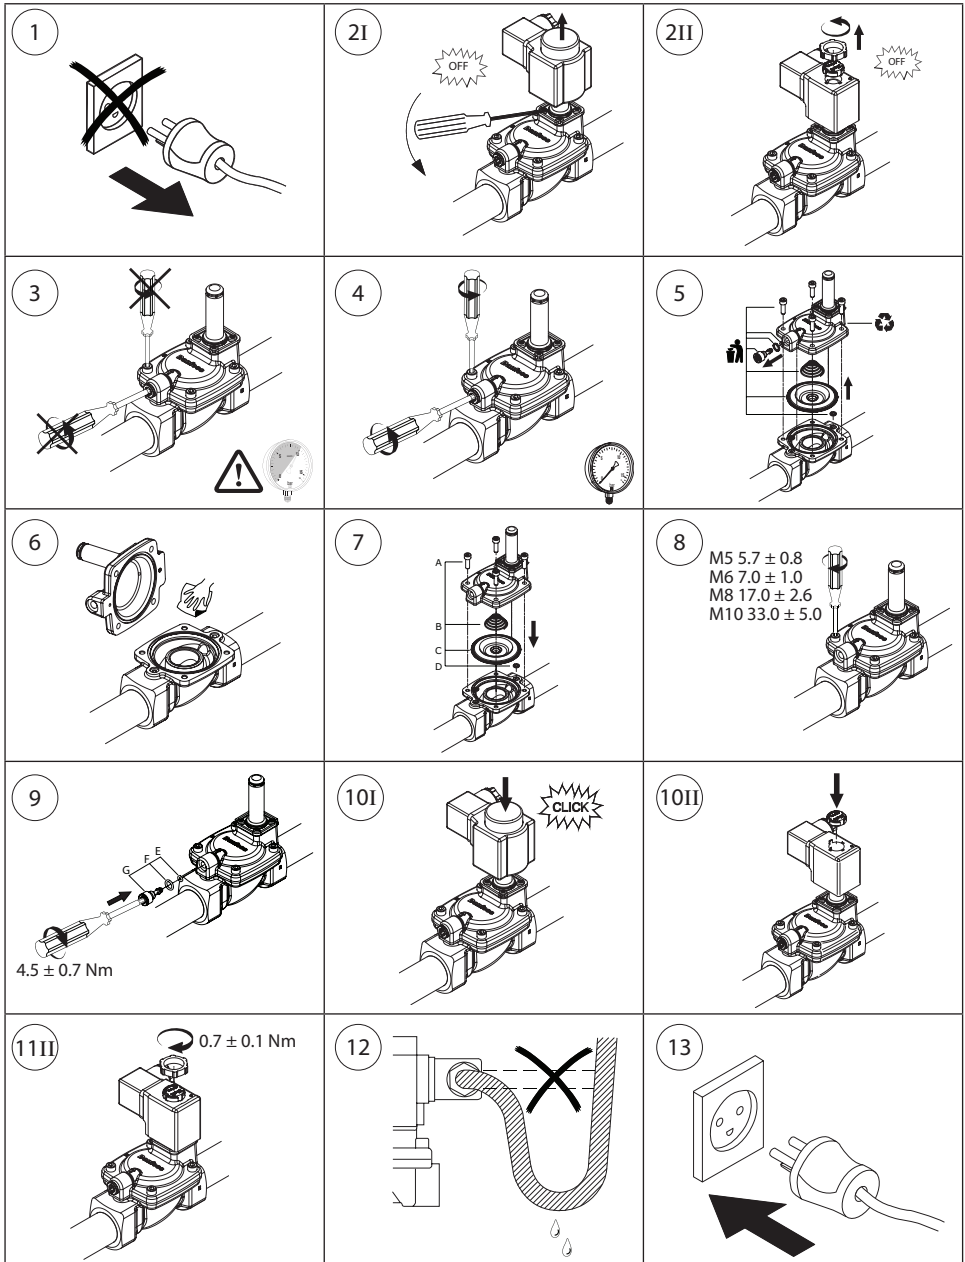
Type EV220BW & EV228BW

132U9101

132U9101



<p>A</p>  <p>Total pcs. = 4</p>	<p>B</p>  <p>Total pcs. = 1</p>	<p>C</p>  <p>Total pcs. = 1</p>	<p>D</p>  <p>Total pcs. = 2</p>
<p>E</p>  <p>Total pcs. = 1</p>	<p>F</p>  <p>Total pcs. = 1</p>	<p>G</p>  <p>Total pcs. = 1</p>	



Visit [www.products.danfoss.com](http://www.products.danfoss.com) for further technical data  
 Para más información, visite [www.products.danfoss.es](http://www.products.danfoss.es)  
 Rendez-vous sur le site [www.products.danfoss.fr](http://www.products.danfoss.fr) pour plus de données techniques