








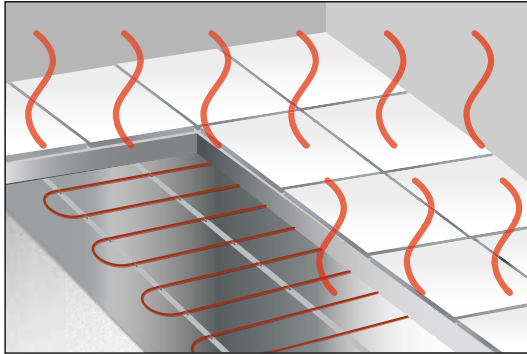


Installation Guide

# Grundfos UPM3 AUTO L Pump Floor Heating



<p>1.</p>  <p>1 x </p> 	<p>2.</p>  <p>2 sec.</p>  	<p>3.</p>  <p>2 x </p> 
---	--	---

ENGINEERING  
TOMORROW



## **Danfoss A/S**

Floor Heating Hydronics • Ulvehavevej 61 • DK-7100 Vejle • Denmark

Phone: +45 7488 8500 • Fax: +45 7488 8501

heating@danfoss.com • [www.floorheating.danfoss.com](http://www.floorheating.danfoss.com)

---

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

---