



# Instructions

## Safety thermostats, ST-1 and ST-2



087R9072

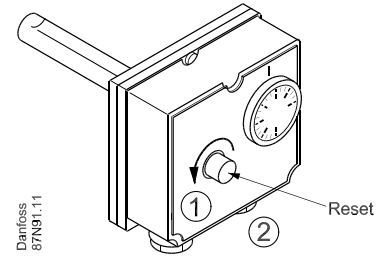
087R9072



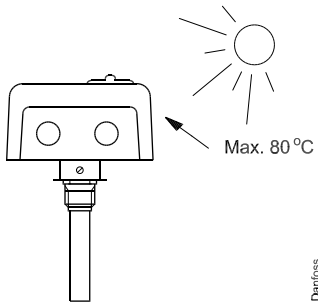
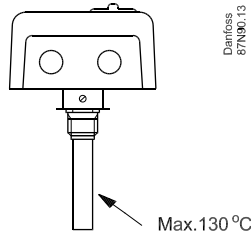
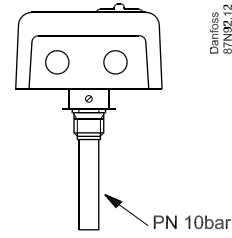
 
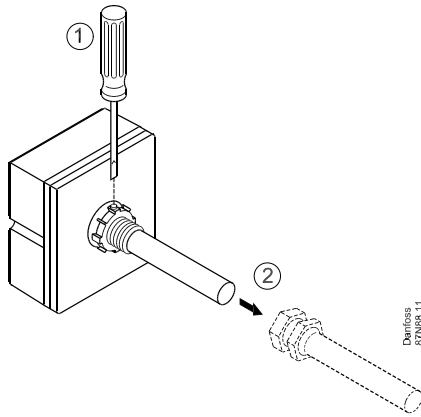
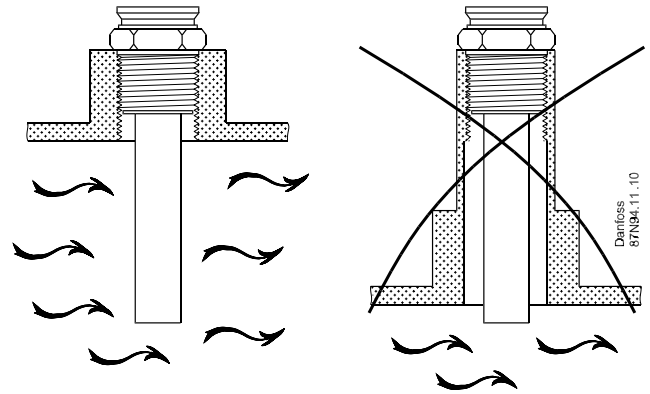
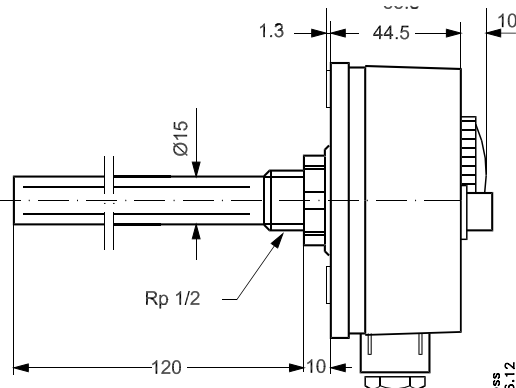
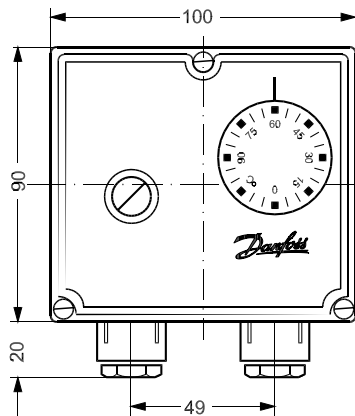
ST-1



ST-2

Danfoss  
87N91.11

ST-2

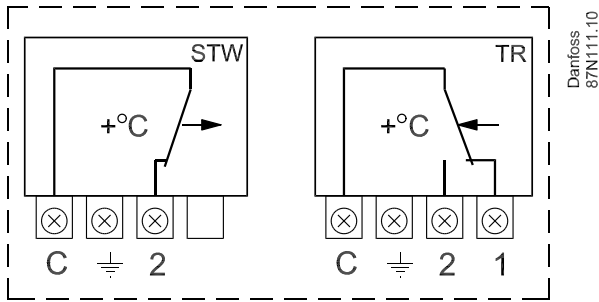
Danfoss  
87N93.11Danfoss  
87N96.13Danfoss  
87N92.12Danfoss  
87N93.12Danfoss  
87N88.11Danfoss  
87N94.11 .10Danfoss  
87N86.12



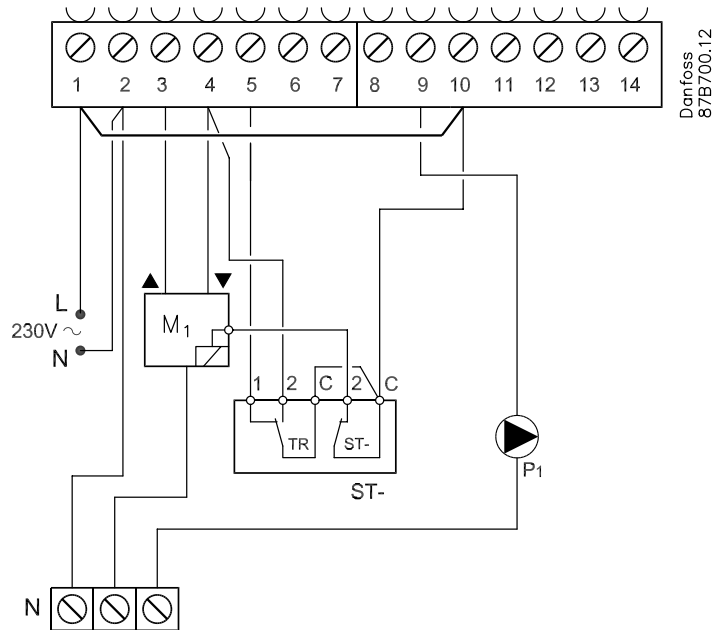
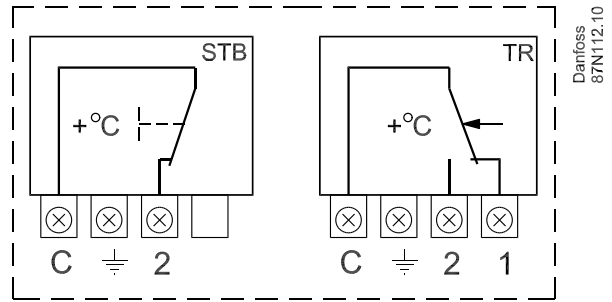
087R9072

087R9072

**ST-1**



**ST-2**



ECL Comfort / AMV(E) 13-23-33