



REFRIGERATION AND
AIR CONDITIONING




Instructions Protocol interface AK-PI 200



080R9263



RI8LU102

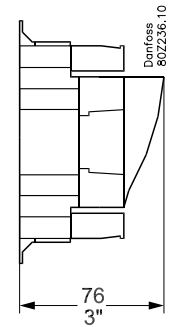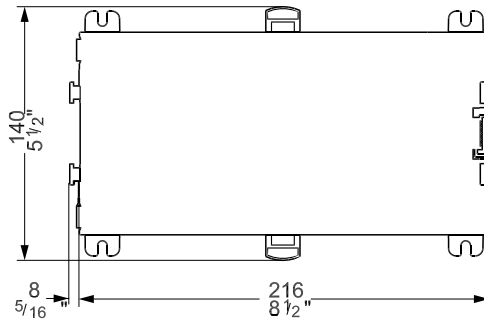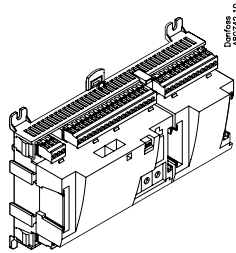

CE

$-20^{\circ} < t_{amb} < 55^{\circ}C$
 $-0^{\circ}F < t_{amb} < 130^{\circ}F$
0 - 95% RH, non condensing
IP10 / VBG4
UL: E166834


AK-PI 200 installation:

See manual: RS8EX


Data communication:

See literature : RC8AC


Princip

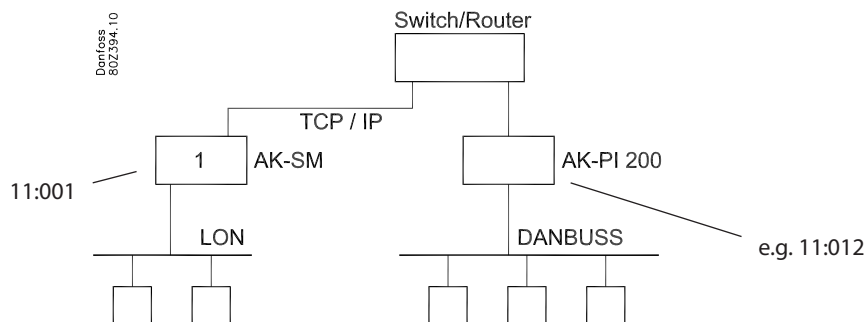


Supply voltage:

Transformer
Class II 


The 24V must not be shared by other controllers or units

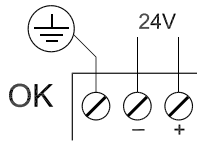

The 24 V input must not have earth connection

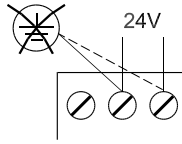


Danfoss
802206.11

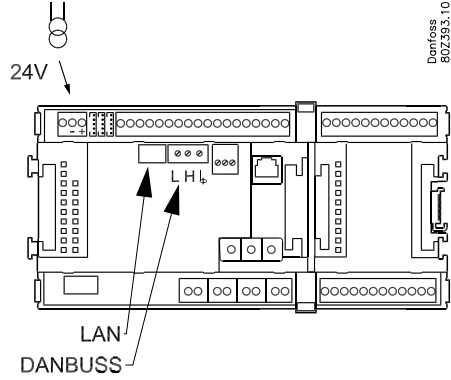


Danfoss
802393.10

Address

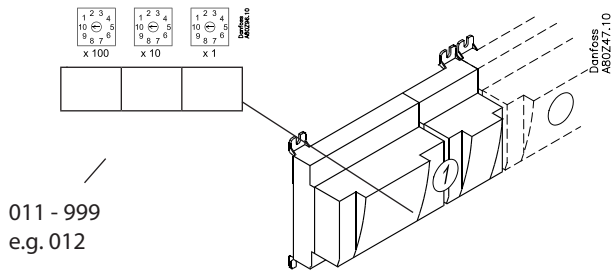

Danfoss
80247.10

 The Product contains electrical components
And may not be disposed together with domestic waste.
Equipment must be separate collected with Electrical and Electronic waste. According to Local and currently valid legislation.