



Installation guide

Shut-off diaphragm valve

Type BML and BMT

009R9663

009R9663

Refrigerants:

For a complete list of approved refrigerants, visit <http://store.danfoss.com/> and search for individual code numbers, where refrigerants are listed as part of product details.

Note: Flare connection is only approved for A1 and A2L refrigerants.


Applicable to A1, A2, A2L and A3 refrigerants as accepted by Danfoss, excluding R717 and to non-corrosive gases/liquids dependent on sealing material compatibility. The design pressure shall not be less than the value outlined in section 9.2 of ANSI/ASHRAE 15 for the refrigerant used in the system.

Media Temperature:

Min. -55 °C / -67 °F
Max. 100 °C / 212 °F

Working Range:


$\Delta p = -1 - 21 \text{ bar} /$
 $-14 - 304 \text{ psig}$

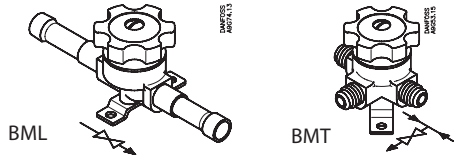


Max. Working Pressure:

PS/MWP = 28 bar / 406 psig


- 1** Remove Cover
ODF solder

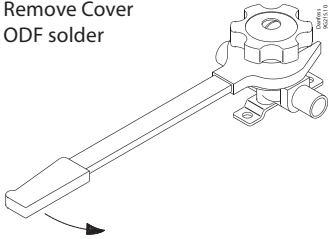

- 2** Soldering
ODF solder

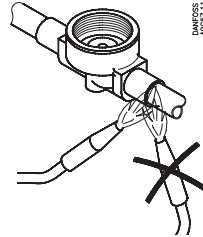


- 3** Open valve

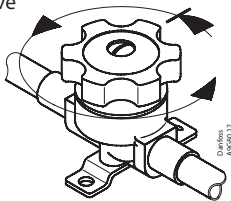


Must be fully open

- 4** Tighten cover

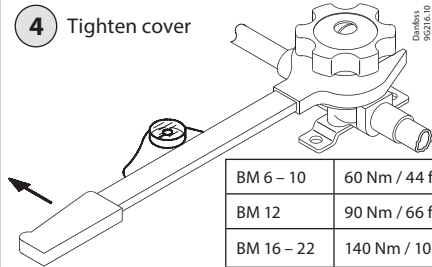


BM 6 - 10	60 Nm / 44 ft-lbs
BM 12	90 Nm / 66 ft-lbs
BM 16 - 22	140 Nm / 103 ft-lbs

- 1** Soldering
ODF solder (extended ends)

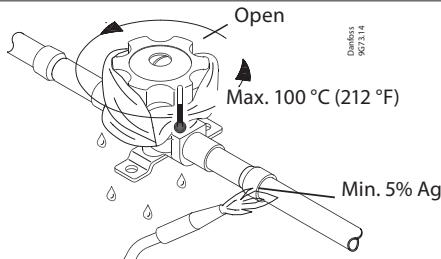


Service kit installation

1 Open Valve

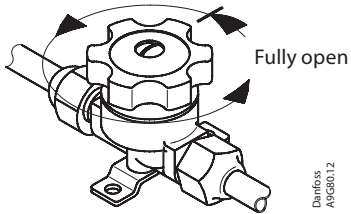


Danfoss
A9GB0.12

2 Remove Cover

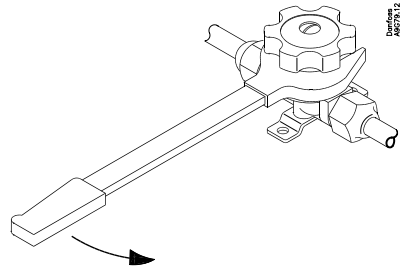


Danfoss
A9GB0.12

3 Replace diaphragm

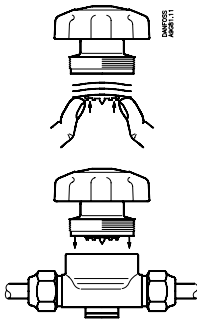


Danfoss
A9GB0.12

4 Open valve

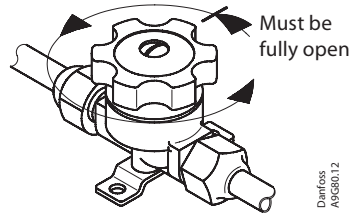


Danfoss
A9GB0.12

5 Tighten cover

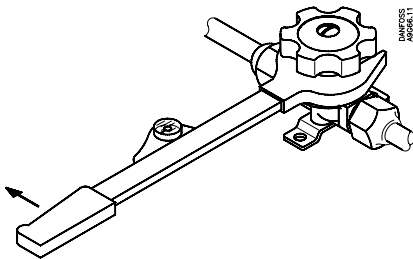

Danfoss
A9GB0.12

6 Smear grease

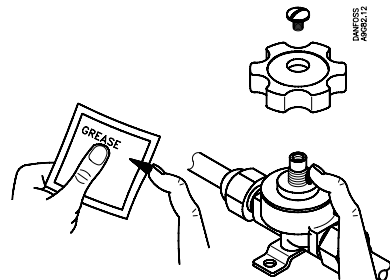

Danfoss
A9GB0.12

BM 6 – 10	60 Nm / 44 ft-lbs
BM 12	90 Nm / 66 ft-lbs
BM 16 – 22	140 Nm / 103 ft-lbs